



Nokia 2128i Power Button Replacement

This guide will explain how to access and remove the top power button which turns the phone on and off.

Written By: Curtis Lutje



INTRODUCTION

If the power button is broken or does not press properly, replace the small plastic button.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Be sure cell phone is off before you begin to disassemble the phone.
- Press the button on the bottom of the back of the cell phone.
- Slide rear panel down and remove it.

Step 2



- Using your fingernail, pry the back of the battery upwards and pull out.

Step 3 — Faceplate




- Insert the plastic opening tool under the faceplate.
- Separate the faceplate from main body by twisting the prying tool with some force.
- The faceplate is held by three plastic fasteners, so pry evenly on both sides of phone.

Step 4 — Keypad





- With the faceplate removed, simply peel off rubber key pad and remove.

Step 5 — Motherboard Assembly

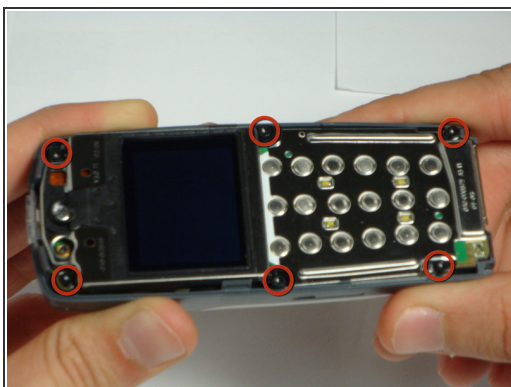




- Locate and remove the six screws on the front of the phone using a T6 Torx.
- All 6 screws are 6.9mm long.

Step 6

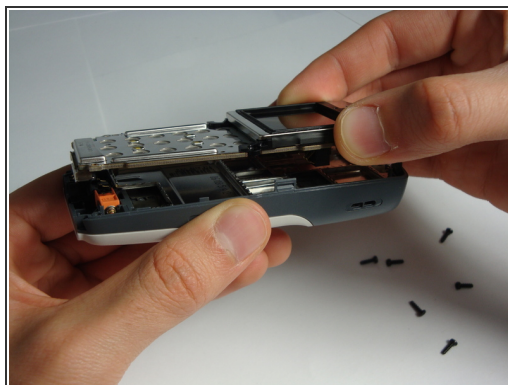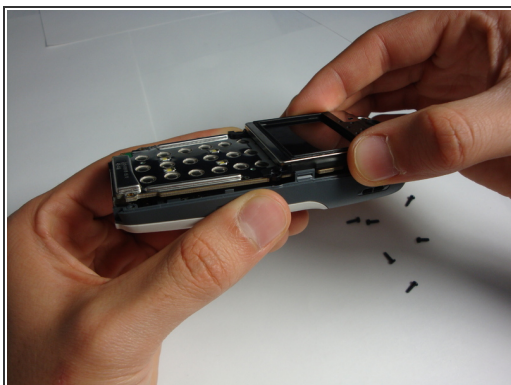

- After removing screws, lift the motherboard assembly straight off the cell phone body.

Step 7 — Power Button

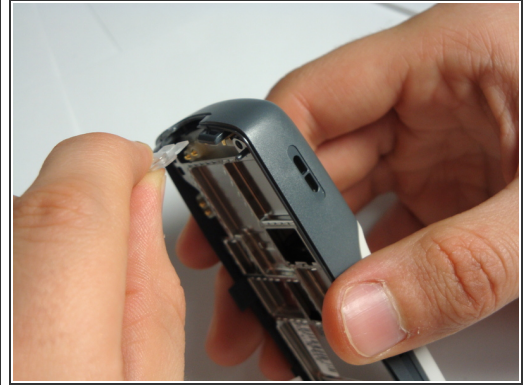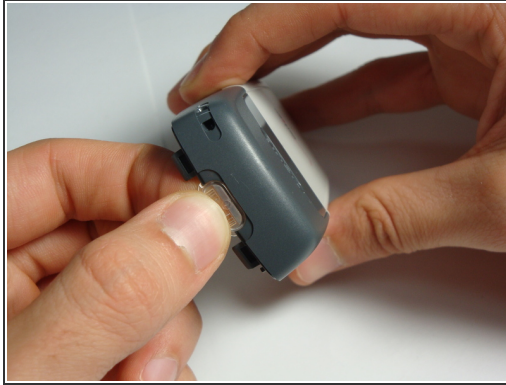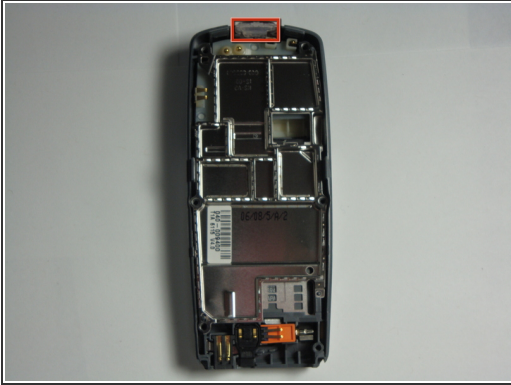

- With the motherboard and LCD unit removed, gently pull the power button out of its housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:56:21 PM.